

DYNAMIC SERIES

Part C: FJS transmitting unit



INDEX


1 Description	C - 2
2 Technical data	C - 2
3 Technical data sheet	C - 3
4 Plates	C - 3
5 Light signals	C - 4
5.1 Light signals with two LEDs	C - 4
5.2 Light signals with three LEDs	C - 5
6 Malfunction signalled by the transmitting unit	C - 6

LIFJSE00-02



A0LI BR01D0013

1 Description

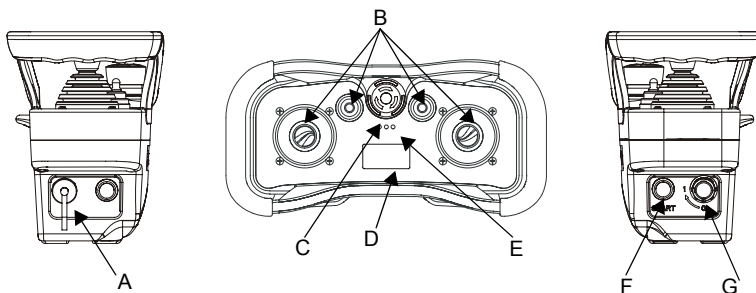

A	connector for wire control (if present)	B	actuators (joysticks, selectors, pushbuttons)
C	STOP pushbutton	D	display or LED (if present)
E	LEDs	F	START pushbutton
G	S-KEY (electronic starting key)		

2 Technical data

Power supply (battery MBM06MH).....	NiMH 7.2 V=
Antenna	internal
Housing material	PA 6 (20% fg)
Protection degree	IP65 (NEMA 4)
Dimensions	258 x 170 x 126 mm (10.2 x 7.0 x 5.0 In)
Weight	1.3 kg (2.8 Lb)
Run time (at 20°C / 68°F)	11 h
Run time with Data Feedback (at 20°C / 68°F)	9.5 h
Run time with Low Power (at 20°C / 68°F)	14 h
Run time with Data Feedback and Low Power (at 20°C / 68°F)	12.5 h

Dynamic Series

Part C: FJS transmitting unit

3 Technical data sheet

The technical data sheet contains the transmitting unit configuration and shows the matching between commands sent and machine functions/movements. It also contains the wiring diagram showing the connection between the receiving unit and the machine.

Each technical data sheet must be filled in, checked and signed by the installer, who is responsible for a correct wiring.

A copy of the technical data sheet must always be kept together with this manual (always keep a copy of this data sheet for administrative purposes).



The wiring of the receiving unit outputs must always reflect the wiring indicated in the technical data sheet.

4 Plates

The transmitting unit has three plates.


Plate	Position	Content
radio remote control identification plate	On the S-KEY: remove the S-KEY to read the plate.	Radio remote control serial number (S/N).
transmitting unit identification plate	In the battery housing: remove the battery to read the plate.	Manufacturing year, bar code and transmitting unit identification number (TU ID).
technical data plate	In the battery housing: remove the battery to read the plate.	MODEL, TYPE and main transmitting unit technical data, marking and possible radio remote control marks.


5 Light signals


FJS transmitting units may have two or three LEDs near the STOP pushbutton.

5.1 Light signals with two LEDs

The left LED is green, the right LED is red, and they provide information regarding the radio remote control.

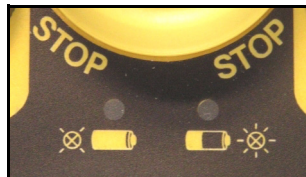

 The green LED ...	Meaning
... is off	The transmitting unit is switched off.
... blinks fast	The transmitting unit is switched on and there is no radio link.
... blinks slowly	The radio remote control is started and the radio link is present.

 
 The red LED ^a ...	Meaning
... is off	The transmitting unit works correctly.
...blinks	The battery is nearly flat.
... is on for 2 seconds ^b	The transmitting unit does not work correctly.
... blinks once ^b	At power on, the transmitting unit detects that the STOP pushbutton is activated or damaged.
... blinks twice ^b	At power on, the transmitting unit detects that one of the commands D2-D20 or SAFETY is activated or damaged (see technical data sheet).
... blinks three times ^b	At power on, the transmitting unit detects that the battery is flat.
... blinks four times ^b	At power on, the transmitting unit detects that one of the commands A1-A8, L1-L8 and H1-H8 is activated or damaged (see technical data sheet).


- An acoustic signal is also heard when the red LED is illuminated.
- After this signal, the transmitting unit switches off.


5.2 Light signals with three LEDs

Side LEDs are red and provide information coming from the machine (Data Feedback function).

- The central LED is bicolour, green and red. The green LED is inhibited when the red one is on: the green LED signals only appear when the red ones pause. The central LED provides information about the radio remote control.

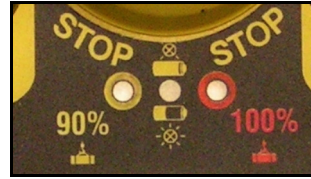

 Central LED is green and it ...	Meaning
... is off	The transmitting unit is switched off.
... blinks fast	The transmitting unit is switched on and there is no radio link.
... blinks slowly	The radio remote control is started and the radio link is present.

 Central LED is red and it ...^a	Meaning
... is off	The transmitting unit works correctly.
...blinks	The battery is nearly flat.
... is on for 2 seconds ^b	The transmitting unit does not work correctly.
... blinks once ^b	At power on, the transmitting unit detects that the STOP pushbutton is activated or damaged.
... blinks twice ^b	At power on, the transmitting unit detects that one of the commands D2-D20 or SAFETY is activated or damaged (see technical data sheet).
... blinks three times ^b	At power on, the transmitting unit detects that the battery is flat.
... blinks four times ^b	At power on, the transmitting unit detects that one of the commands A1-A8, L1-L8 and H1-H8 is activated or damaged (see technical data sheet).

- An acoustic signal is also heard when the red LED is illuminated.
- After this signal, the transmitting unit switches off.

6 Malfunction signalled by the transmitting unit

Use the light signals on the transmitting unit to identify the radio remote control malfunction.

If the problem persists after the suggested solution has been carried out, contact the support service of the machine manufacturer.

Signals	Possible reason	Solutions
The green LED does not switch on when the START pushbutton is pressed, even though both the battery and the S-KEY are inserted.	The battery is flat.	Replace the battery with a charged one.
The green LED blinks fast.	No radio link.	Bring the transmitting unit close to the receiving unit.
The red LED switches on for 2 seconds and then the unit switches off.	The transmitting unit does not work correctly.	Perform the procedure to save the address.** Contact the support service of the machine manufacturer.
The red LED blinks once during start up.	The STOP pushbutton is locked or damaged.	Unlock the STOP pushbutton. If this signal persists, contact the support service of the machine manufacturer.
The red LED blinks twice during start up.	At least one of the actuators corresponding to commands D2-D20 and SAFETY is activated or damaged.	Bring the actuators to the rest position. If this signal persists, contact the support service of the machine manufacturer.
The red LED blinks three times during start up.	The battery is flat.	Replace the battery with a charged one.
The red LED blinks four times during start up.	At least one of the actuators corresponding to commands A1-A8, L1-L8, H1-H8 and SAFETY is activated or damaged.	Bring the actuators to the rest position. If this signal persists, contact the support service of the machine manufacturer.

** Procedure to save the address

- press the STOP pushbutton
- press the START pushbutton and do not release it until the green LED switches off
- unlock the STOP pushbutton

